

# Stagg®

---

## USER MANUAL



## EcoPar18

SLI-ECOPAR18

Please read the instructions carefully before use



# SAFETY INSTRUCTIONS



**Please read the instructions carefully as they include important information about the installation, operation and maintenance.**

- Please keep this user's guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- All fixtures leave the manufacturer intact. Please note that any damages incurred by the user is not covered by the guarantee.
- Unpack and check carefully that there is no transportation damage before using the unit.
- The unit is for indoor use only. Use only in a dry location.
- Use a safety bond when attaching the fixture to a lighting rig. Handle by the hanging bracket when fixing.
- The unit must be installed in a location with adequate ventilation at least 50 cm from adjacent surfaces.
- Make sure that no ventilation slot is blocked, otherwise the unit will overheat.
- Before operating, ensure that the voltage and frequency of the power supply match the power requirements of the unit.
- Make sure all equipment is properly earthed.
- Do not operate the unit if the ambient temperature is higher than 40°C.
- Do not hardwire to any mains dimmer.
- On the first run there may be some normal operational start-up smell.
- Make sure that there is no flammable material close to the unit while operating, as it is a fire hazard.
- Look over power wires carefully and replace immediately if there is any damage.
- Never run on for a long time lest shortening lifespan. Avoid any inflammable liquids, water or metal objects entering the unit. In case it happens, cut off the mains power immediately.
- Do not operate in a dirty or dusty environment. Clean fixtures regularly.


- Do not allow children unsupervised to operate the fixture.
- Do not touch any wire during operation as there might be a hazard of electric shock.
- Avoid placing power wires next to other cables.
- Disconnect the mains power before replacing or servicing the fusewires or the lamp.
- Replace fuse only with the same type.
- In the event of a serious operating problem, stop using the unit immediately.
- Never turn on and off the unit time after time.
- The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.
- Do not open the unit as there is no user serviceable part inside.
- Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance centre.
- Disconnect the mains power if the fixture is not used for a long time.
- Use the original packaging to transport regarding any warranty issue.
- Do not look directly at the LED light beam while the fixture is on.
- Do not connect more than 7 units to the same power source.

## **INSTALLATION**

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and able to support 10 times the unit's weight. Also always use a safety cable that can hold 12 times the unit's weight when installing the fixture.


# TECHNICAL SPECIFICATIONS

- LED: 18 x 1 watt
- Illuminance: 1400 lux at 3 metres (9.8')
- Beam angle: 25°
- Protocol: DMX-512, 3 or 7 channels
- Functions: Dimmer (0-100 %), strobe, auto, sound control, master/slave
- Display: 4-digit
- Housing: ABS
- Fixation: 2 brackets (to hang or lay the spotlight)
- Input and output: 3-pin DMX and IEC
- Cooling: Low-noise fan
- Use: Indoor
- Power consumption: 30 watts
- Dimensions: 24 x 23.5 x 8 cm (9.4 x 9.3 x 3.1»)
- Weight: 1 kg (2.2 lb)
- Included: Remote control

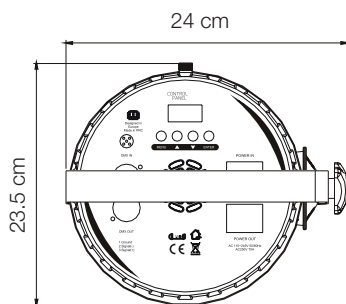

## BACK PANEL

1. Function display
2. Menu buttons
3. DMX output
4. DMX input
5. IEC input
6. IEC output
7. Microphone

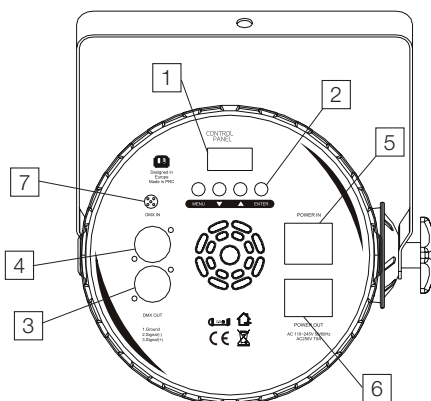

# SETTING THE FIXTURE

MENU	ADDR	1	DMX mode	
		512		
	CHMD	3CH	Channel selection mode	
		7CH		
	SLMD	MAST	Master and slave mode	
		SL 1		
		SL 2		
		SL 3		
		SL 4		
	SHMD	COLO	CO 1-7	Performance mode
			STRO	
			0	
			255	
		FADE	SP 1	
			SP 8	
		SOUN	YES	
		AUTO	YES	
	LED	ON	Switching on or off the display	
		OFF		
	DISP	DISP	Reversing the display	
		DISP		
	BALA	RED	125	White balance
			255	
		BLUE	125	
			255	
		GREE	125	
			255	
	MANU	RED	0	
		255		
	BLUE	0	Manual mode	
		255		
	GREE	0		
		255		
TEST	Test mode			
FHRS	Hours of operation			
RF	YES	Remote control		
	NO			
TEMP	Current temperature			

## DMX Mode

With the menu button, select the DMX mode (Addr) and press the enter key to confirm. Then use the up and down buttons to choose the desired DMX channel (1 – 512) and press the enter key to confirm. Press the menu button to return to the main menu.

## Channel selection mode

With the menu button, select the channel selection mode (ChMd) and press the enter key to confirm. Then use the up and down buttons to choose the desired mode, that is 3 channels (3Ch) or 7 channels (7Ch), and press the enter key to confirm. Press the menu button to return to the main menu.

## 3 CH CHANNEL MODE

1 CH	2 CH	3 CH
Red	Green	Blue

## 7 CH CHANNEL MODE

1 CH	2 CH	3 CH	4 CH	5 CH	6 CH	7 CH
Red	Green	Blue	Dimmer	Strobe	color walking	Sound control

## **Master and slave mode**

With the menu button, select the master and slave mode (SLMd) and press the enter key to confirm. Then use the up and down buttons to choose the desired option, that is master (MASt), slave 1 (SL1), slave 2 (SL2), slave 3 (SL3) or slave 4 (SL4), and press the enter key to confirm. Press the menu button to return to the main menu.

## **Performance mode**

With the menu button, select the performance mode (ShMd) and press the enter key to confirm. Then use the up and down buttons to choose the desired option, that is colour (CoLo), fade (Fade), sound (Soun) or automatic (Auto), and press the enter key to confirm. Then use the up and down buttons to select the desired value and press the menu button to return to the main menu.

In the colour mode, you can select a value between 1 (Co 1) and 7 (Co 7). Each value corresponds to a specific colour. Press the enter key to confirm.

In the strobe mode, which is accessible through the colour mode, you can select a value between 0 and 255. Each value corresponds to a specific speed. Press the enter key to confirm.

In the fade mode, you can select a value between 1 (SP 1) and 8 (SP 8). Each value corresponds to a specific speed. Press the enter key to confirm.

In the sound mode, you can decide to activate (yes) or deactivate (no) the sound control. When the sound mode is on, the spotlight reacts to sound. When the sound mode is off, the spotlight does not react to sound. Press the enter key to confirm your choice and press the menu button to return to the main menu.

In the auto mode, you can choose to play a preset show in an endless loop. Press the enter key to start the auto mode. The auto mode will stop when you return to the main menu.

## **Switching on or off the display**

With the menu button, select the switching on or off the display mode (Led) and press the enter key to confirm. Then use the up and down buttons to choose to switch on the display (on) or to switch it off (off), and press the enter key to confirm. The back led display will automatically be switched off after a few minutes (off) or will remain on as long as the spotlight is used (on). Press the menu button to return to the main menu.

## **Reversing the display**

With the menu button, select the reversing the display mode (dISP) and press the enter key to confirm. Then use the up and down buttons to choose the display mode, that is dISP (up) or d5IP (down), and press the enter key to confirm. Press the menu button to return to the main menu.



## **White balance**

With the menu button, select the white balance mode (bALA) and press the enter key to confirm. Then use the up and down buttons to select the desired colour, that is red (red), blue (bLue) or green (Gree), and press the enter key to confirm. Then use the up and down buttons to select a value between 125 and 255 and therefore determine the colour temperature. Press the enter key to confirm. Press the menu button to return to the main menu.

## **Manual mode**

With the menu button, select the manual mode (MAnu) to create your own colour and press the enter key to confirm. Then use the up and down buttons to select the desired colour, that is red (red), blue (bLue) or green (Gree), and press the enter key to confirm. Then use the up and down buttons to select the desired colour (between 0 and 255). The chosen colour is automatically displayed. Press the menu button to return to the main menu.

## **Test mode**

With the menu button, select the test mode (teSt) and press the enter key to confirm. The machine automatically starts to diffuse colours. Press the menu button to return to the main menu.

## **Hours of operation**

With the menu button, select the hours of operation mode (Fhr5) and press the enter key to confirm. The number of hours that the device has been working is displayed. Press the menu button to return to the main menu.

## **Remote control**


With the menu button, select the remote control mode (rF) and press the enter key to confirm. Then use the up and down buttons to choose to activate the remote control mode (yes) or to deactivate it (no). Press the enter key to confirm. Press the menu button to return to the main menu.

## **Current temperature**

With the menu button, select the current temperature mode (teMP) and press the enter key to confirm. The temperature of the device is displayed in degrees Celsius. Press the menu button to return to the main menu.

# DMX512 CONNECTIONS

The DMX512 is widely used in intelligent lighting control, with a maximum of 512 channels.

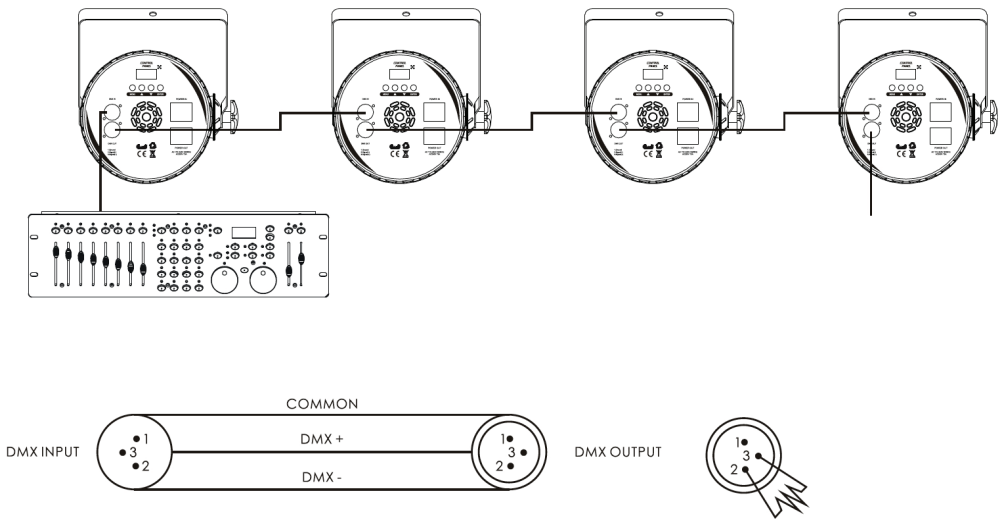

## Warning

To avoid signal transmission problems and interferences when using fixtures in chain, use a Stagg N-series professional 3-pin DMX terminator (resistance: 120 ohms; pin2: DMX-; pin3:DMX+).

# FIXTURE CLEANING

An internal cleaning must be carried out periodically to optimize the light output. The cleaning frequency depends on the environment in which the fixture operates: a damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the fixture's optics. Clean the fixture with a soft cloth and normal glass cleaning fluid. Always dry the parts carefully. Clean the internal optics at least every 30 days. Clean the external optics at least every 20 days.

# INFRARED REMOTE CONTROL

## Functions

1. "ON": Turn on the fixture.
2. "OFF": Turn off the fixture.
3. "+" and "-": Adjust various parameters of the fixture.
4. "R": Red colour setting.
5. "G": Green colour setting.
6. "B": Blue colour setting.
7. "W": Not applicable.
8. "A": Not applicable.
9. "UV": Not applicable.
10. "Sound": Sound function selection.
11. "Auto": Auto function selection.
12. "Strobe": Strobe function selection.
13. "Color": Colour function selection.
14. "X": Not applicable.
15. "Y": Not applicable.

# Stagg®

